



AL-1000-E

Remote Security System

Standard Features: The AL-1000-E includes Omega's standard 5 and 8 pin harnesses, 22LC plug-in Valet Switch (featuring Easy Valet operation), and a cool Laser Blue LED Status Indicator Light. This unit has flashing parking light and dome light relays built-in, "flip-flop" (+) positive and (-) negative doorlock outputs, and includes driver door priority option, with basic harness included. "Included in the box" with this model are an AU-84TA dual-zone mini shock sensor, and a Starter Interrupt pre-wired socket and relay. Unit has user-programmable Selectable Coded Override, and includes the patented polyrhythmic Psycho Siren! **2-way upgradeable with the optional ECHO-2.**

Two Transmitters included: 2 mini 4-Button 433 MHz, code-jumping Transmitters with pictograph buttons.

Operations: Lock Button - Press and release to Arm/Lock. Press and hold to activate Remote Panic with locking doors.

Unlock Button - Press and release to Disarm/Unlock. Press and hold to activate Remote Panic with unlocking the doors.

II Button - Press and hold to activate trunk release. Press and release twice to arm/lock - disarm/unlock without confirmation chirps.

III Button - Press and hold to activate remote panic.

Press and hold **Lock** and **Unlock** together to activate 3rd channel output.

How to Code the Transmitters: Turn "on" the ignition, then press the valet switch 5 times and wait for siren confirmation of entry into programming mode. Press and release the "II" button on each transmitter to be coded (one at a time). The system will respond to each with an audible confirmation.

Omega part #s

146-03B (black / gray)

146-03G (smoke tint / green glow)



The AL-1000-E is



25 Programmable Features

Feature

- Feature #1 SecureCode
- Feature #2 Last Door Arming
- Feature #3 Automatic Rearming
- Feature #4 Starter Interrupt 90 sec. after Ign Off or Disarming
- Feature #5 Doors Lock with Last Door Arming
- Feature #6 Doors Lock With Automatic Rearming
- Feature #7 Doors Lock With Ignition "ON"
- Feature #8 Ignition OFF Unlock #1
- Feature #9 Ignition OFF Unlock #2
- Feature #10 Open Door Bypass To The Previous Three Features
- Feature #11 Confirmation Chirps
- Feature #12 Confirmation Chirps In Valet Mode
- Feature #13 Activated Alarm Cycle
- Feature #14 Lights On Upon Disarm
- Feature #15 Disarm Upon Activating 2nd Channel
- Feature #16 Double Unlock Pulse
- Feature #17 Arming Delay
- Feature #18 Pulsed Horn / Steady Siren Output
- Feature #19 Confirmation Chirp Volume
- Feature #20 Total Closure Lock Output
- Feature #21 Ignition Activated Anti-Carjacking Protection
- Feature #22 Door Activated Anti-Carjacking Protection
- Feature #23 Transmitter Activated Anti-Carjacking Protection
- Feature #24 Open Door Warning Upon Arming
- Feature #25 "III" Button Operated Panic or 3rd Channel

Default Lock Unlock

Default	Lock	Unlock
1-0 switch presses (manual program)		
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
ON	ON	OFF
ON	ON	OFF
ON	ON	OFF
ON	ON	OFF
OFF	ON	OFF
30 sec.	60 sec.	30 sec.
ON	ON	OFF
ON	ON	OFF
OFF	ON	OFF
3 sec.	3 sec.	45 sec.
Steady	Steady	Pulsed
Medium Loud	Loud	Soft
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
Panic	Panic	3rd Channel

How to Program the Features

Features may be programmed either manually, using the transmitter, or with the FPM-1 Features Programming Module. To program the features manually:

Turn off the ignition.

Press the valet switch 5 times, wait for audible response, and then select the feature by pressing the valet button a number of times equal to the feature number.

Press the **Lock** or **Unlock** transmitter button to configure the feature as desired.

Repeat pressing the valet switch to access the next feature, and then again press the **Lock** or **Unlock** button to configure the selected feature.

Total System Reset

The FPM-1 Features Programming Module can be used to return all of the Programmable Features to the default setting. The FPM-1 also shows each Programmable Feature's status, and offers individual programming or "all at once" features programming to a chosen preset configuration.

Smart Trigger

The Smart Trigger utilizes the Domelight Supervision circuit for the alarm's open door trigger input- simply program the polarity with the Smart Trigger jumper.

2-Way ECHO-2 Upgradeable:

The Excalibur can be easily upgraded from 1-way control operation only to 2-way control and paging operation with the addition of the optional Omega Echo. To install the Echo, a window-mountable receiver/transmitter unit is simply plugged into the alarm control module; no other wiring connections are needed. The receiver/transmitter also contains alternative system Status Lights and a Valet Switch- these may be used, or the original kit Status Light and a Valet Switch may be retained.

Excalibur AL-1000-E Wiring Diagram Overview

