



MODEL

OL-HRN-RS-NI8

GUIDE ID
CST_NI8_G6_G5_20210409

AVAILABLE ACCESSORIES
OL-HRN-RS-PWR
(Adapt to any brand remote start)

VEHICLE COMPATIBILITY

For RSX-G5 installations see pages 2-12
(OL-HRN-RS-PWR-CST not included but required for G5 units)
For RSX-G6 installations see pages 13-24

Make	Model	Trim	Years	Firmware		Diagram
				XX70 or X70	Stand-Alone	
Infiniti	QX50	Push-to-Start Automatic	2019 - 2020	DL-NI8	RS-NI8	4
Nissan	Altima	Push-to-Start Sedan Automatic	2019 - 2021	DL-NI8	RS-NI8	2
Nissan	Qashqai	Push-to-Start 4 Cyl. Automatic	2017 - 2020	DL-NI8	RS-NI8	2
Nissan	Qashqai	Std. Key 4 Cyl. Automatic	2017 - 2018	DL-NI9	RS-NI9	2
Nissan	Qashqai	Std. Key 4 Cyl. Automatic	2019 - 2020	DL-NI9	RS-NI9	3
Nissan	Rogue	Push-to-Start 4 Cyl. Automatic	2014 - 2016	DL-NI8	RS-NI8	1
Nissan	Rogue	Push-to-Start 4 Cyl. Automatic	2017 - 2020	DL-NI8	RS-NI8	2
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2014 - 2016	DL-NI9	RS-NI9	1
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2017 - 2017	DL-NI9	RS-NI9	2
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2018 - 2020	DL-NI9	RS-NI9	3
Nissan	Rogue Sport	Push-to-Start 4 Cyl. Automatic	2017 - 2020	DL-NI8	RS-NI8	2
Nissan	Rogue Sport	Std. Key 4 Cyl. Automatic	2017 - 2018	DL-NI9	RS-NI9	2
Nissan	Rogue Sport	Std. Key 4 Cyl. Automatic	2019 - 2020	DL-NI9	RS-NI9	3

To control RAP/Autolight Shutdown
set RS Lock feature accordingly.


RSX-G5 - Feature #8 set to Lock and Arm w/ RS Abort

RSX-G6 - Feature #4 set to Lock After RS Off.

See system installation guide for programming instructions


DISCLAIMER: The manufacturer of this product nor its affiliates accept any responsibility for any electrical damage to the vehicle or any other connected systems as a result of improper installation of this product. All wiring connections & vehicle compatibility must be verified by a professionally qualified technician prior to installation.

RSX-G5 Layout

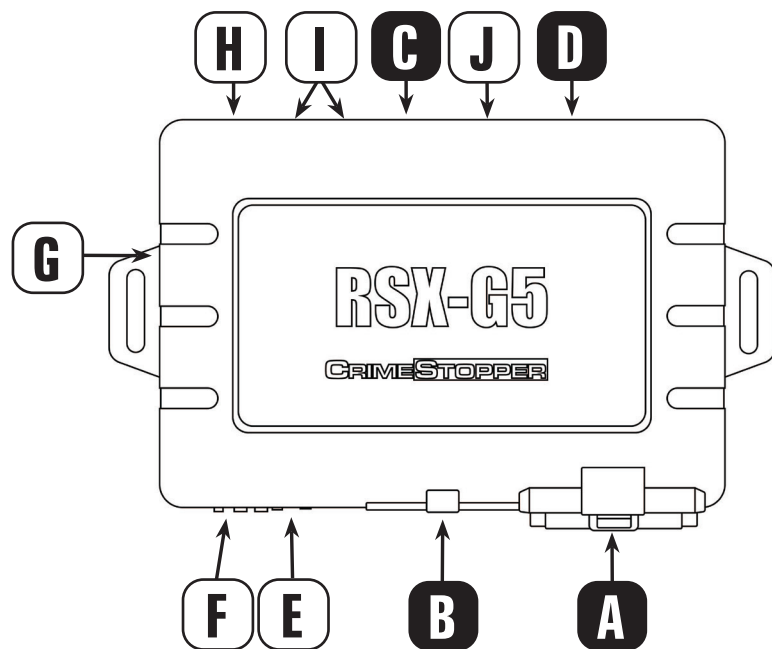

- A** BLACK 6 PIN HIGH CURRENT POWER HARNESS
NOTE: OL-HRN-RS-PWR-CST Adaptor Not Included With T-Harness & Will Be Required
- B** WHITE 12 PIN MAIN INPUT/OUTPUT HARNESS
- C** WHITE 3 PIN DOOR LOCK PORT
- D** RED 3 PIN LOW CURRENT AUX PORT
- E** BLUE 2 PIN PROGRAMMING/VALET PORT
- F** BLACK 3 PIN ANTENNA PORT
- G** SMART PHONE PORT - For LINKR-LT or TELE-CONNECT Smart Phone Interface modules
- H** NOT USED
- I** BLACK DATA PORTS - For Vehicle Interface Module.
(Fortin & iDatalink protocols supported on both ports - see feature #5)
- J** WHITE 2 PIN LED PORT

OL-HRN-RS-PWR-CST Required

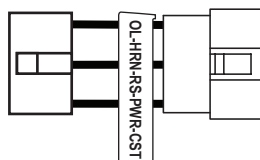

The OL-HRN-RS-PWR-CST re-configures the 6-pin (A) High Current Outputs to be compatible with the Excalibur T-Harness. This adaptor is required for proper operation. In some instances features #4 & #26 will need set to options other than default. In those situations there will be a note indicated the needed settings.

RSX-G5 Installation Steps

INSTALLATION STEPS:

- 1) Go to www.OmegaWeblink.com or use WebLink Mobile to flash the bypass module with the firmware matching the vehicle.
NOTE: iDatalink 2-way protocol is recommended for full functionality.
NOTE: If OEM remote is being used to activate the remote start be sure "Factory keyless RS sequence" is set to "Lock + Lock + Lock" OR "Lock + Unlock + Lock"
NOTE: For Manual Transmission vehicles Feature #11 MUST be set to the desired setting for proper operation.
- 2) Make all the connections shown in the diagram on the following pages.
- 3) Connect any optional hardware as needed.
- 4) Select Data Mode and program the bypass module to the vehicle (see module programming instructions).
- 5) Test the system for all desired functions.

NOTE: Any features NOT supported by the interface module must be hard wired from the remote start to the vehicle. Refer to the remote start install guide and vehicle wiring info at www.wiresheet.com (only available for authorized dealers) for instructions.

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409


Wire Location Chart Diagram #1

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Nissan	Rogue	Push-to-Start 4 Cyl. Automatic	2014 - 2016	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Switch On Lower Dash
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2014 - 2016	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Switch On Lower Dash

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409

RSX-G5 Diagram #1

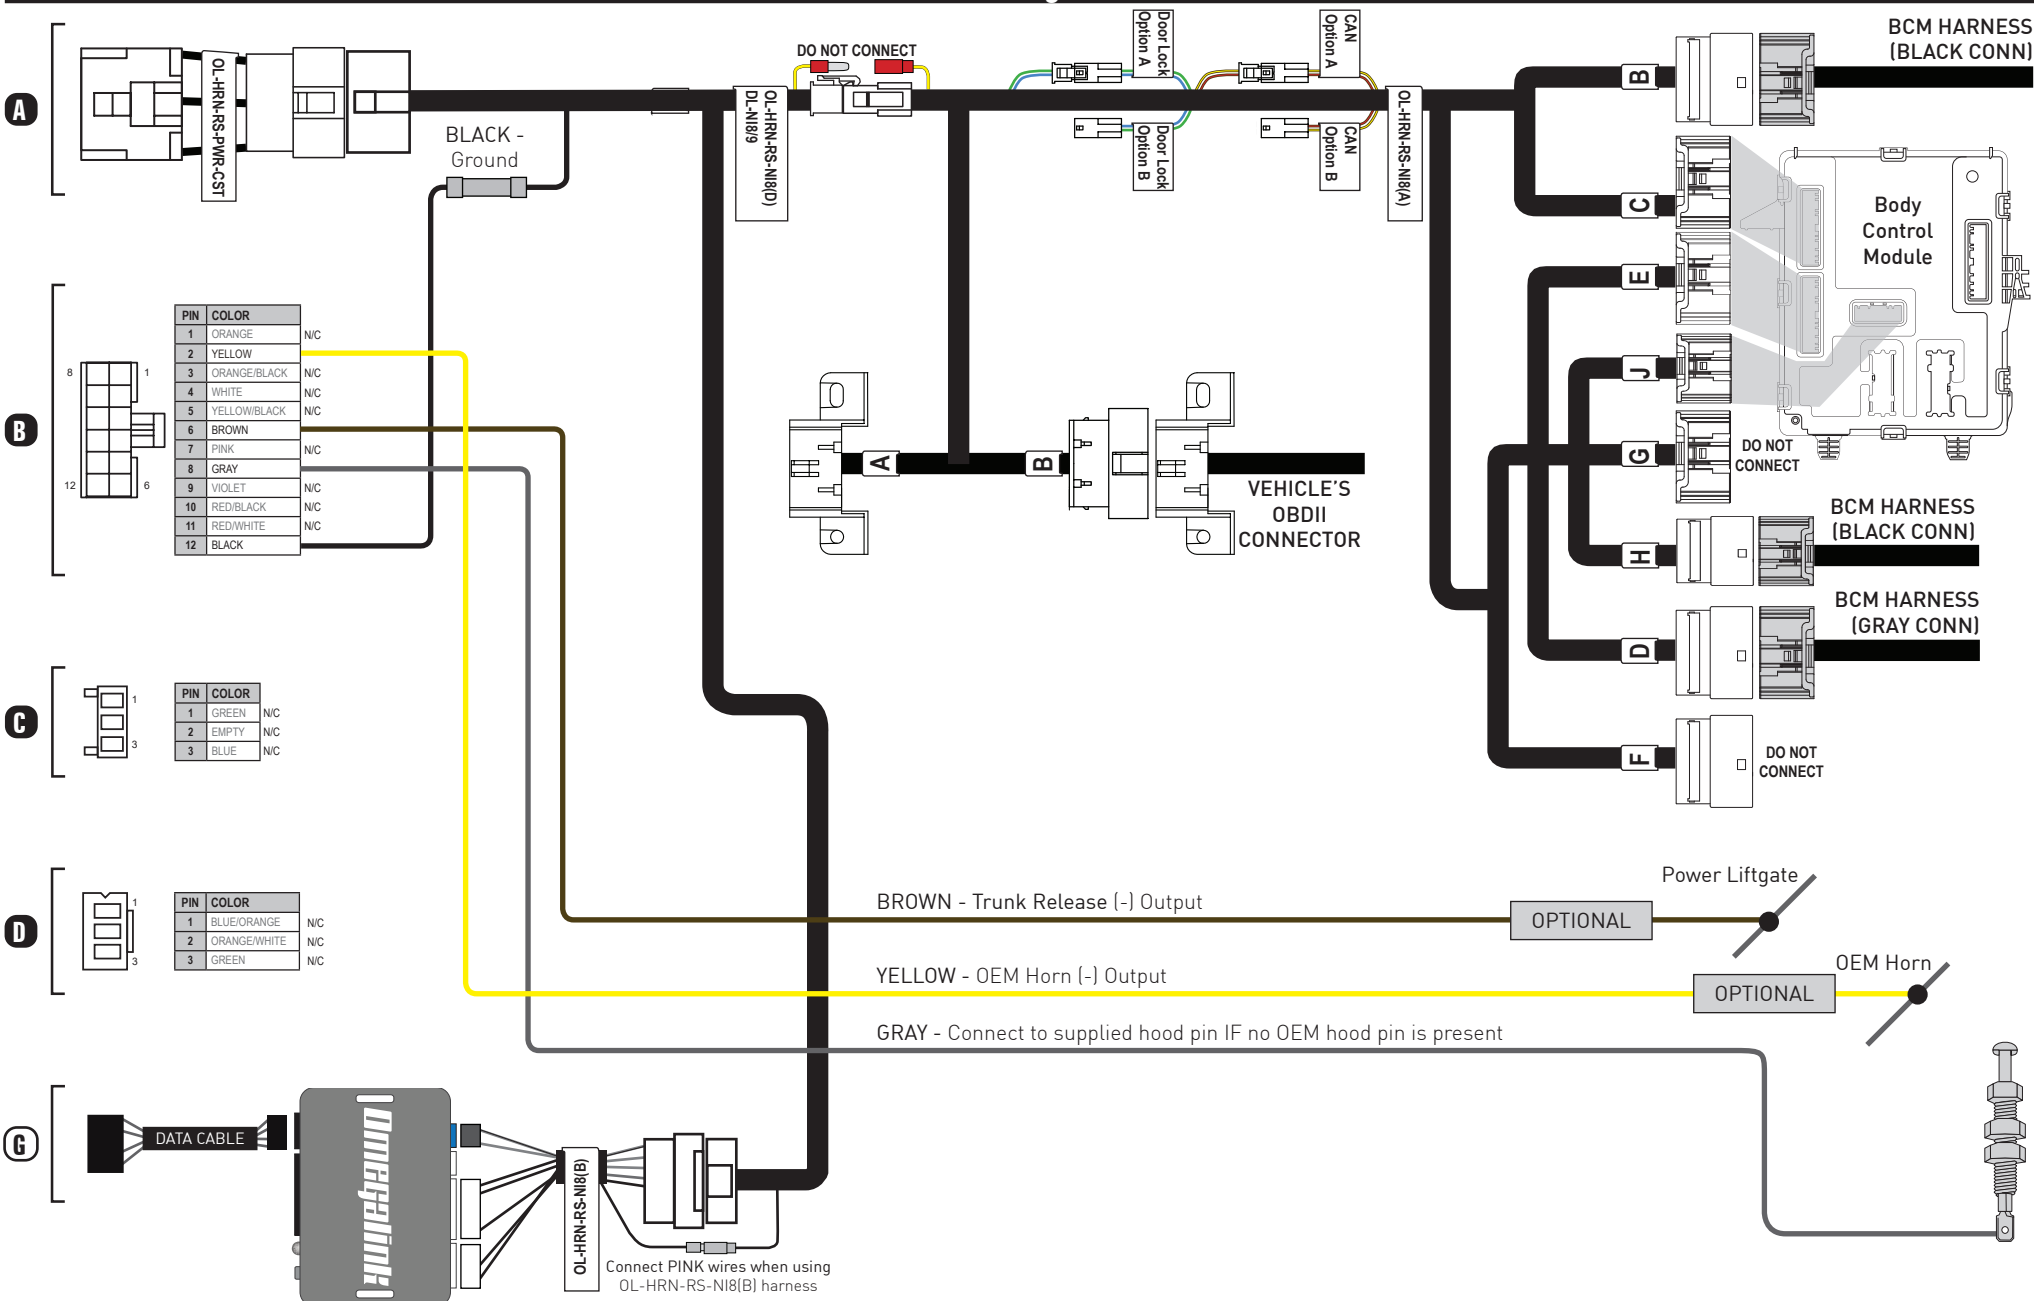


Wire Location Chart Diagram #2

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Nissan	Altima	Push-to-Start Sedan Automatic	2019 - 2021	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	BLACK	16	10	VIOLET	(-)	Horn Switch On Column
				Trunk Release	GRAY	4	2	BROWN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Qashqai	Push-to-Start 4 Cyl. Automatic	2017 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	14	14	WHITE	(-)	At Horn Switch On Column
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Qashqai	Std. Key 4 Cyl. Automatic	2017 - 2018	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	14	14	WHITE	(-)	At Horn Switch On Column
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue	Push-to-Start 4 Cyl. Automatic	2017 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2017 - 2017	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue Sport	Push-to-Start 4 Cyl. Automatic	2017 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	79	PINK	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue Sport	Std. Key 4 Cyl. Automatic	2017 - 2018	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	79	PINK	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT. GREEN	(-)	At Liftgate Switch Lower Dash Panel

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409

RSX-G5 Diagram #2

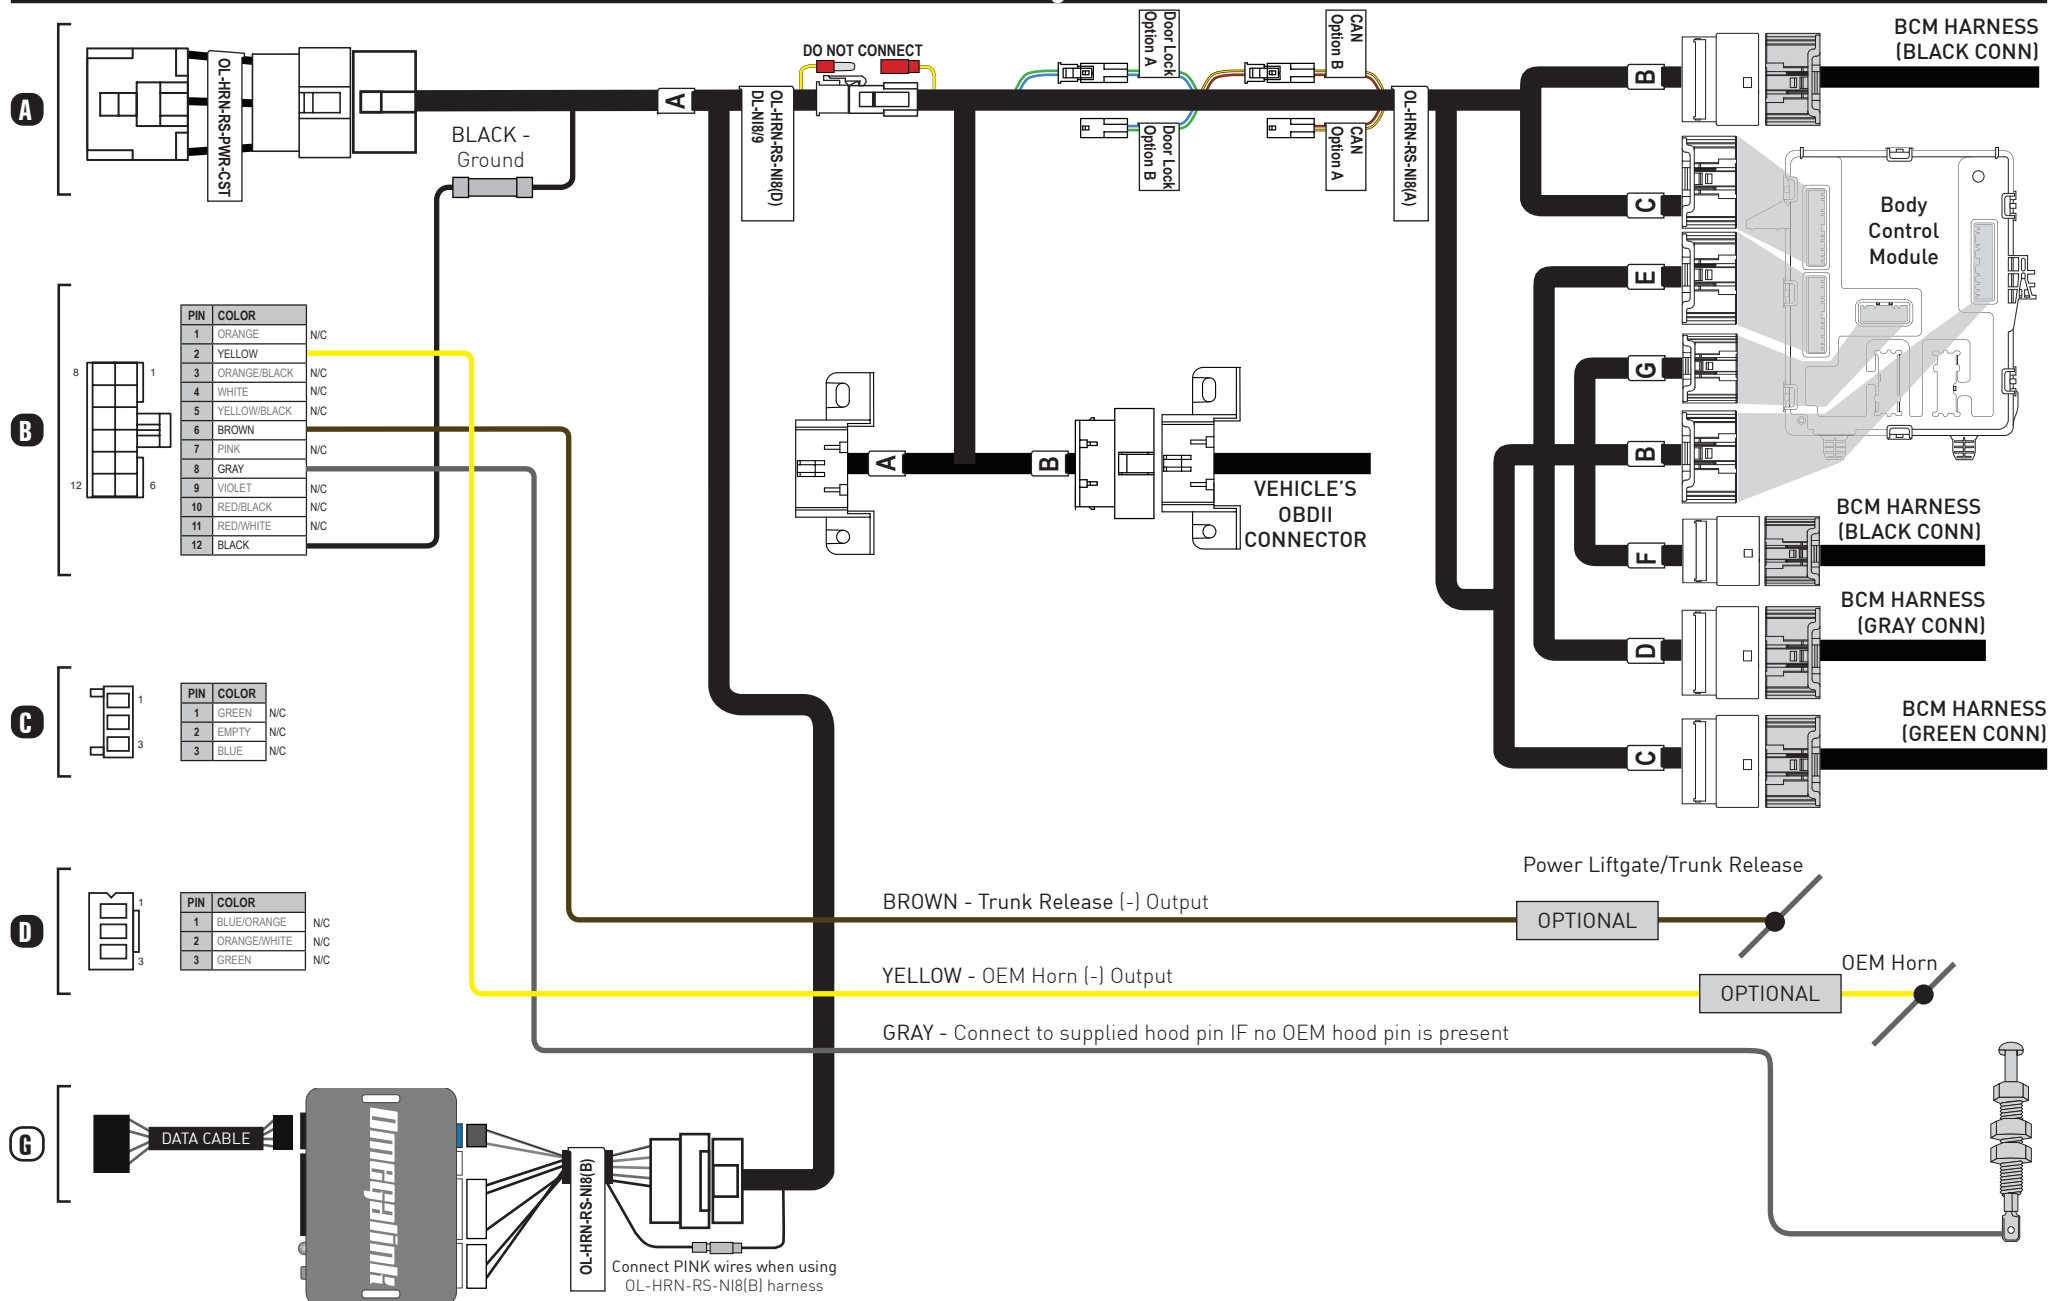

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409


Wire Location Chart Diagram #3

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Nissan	Qashqai	Std. Key 4 Cyl. Automatic	2019 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	14	14	WHITE	(-)	At Horn Switch On Column
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2018 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue Sport	Std. Key 4 Cyl. Automatic	2019 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	79	PINK	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409

RSX-G5 Diagram #3

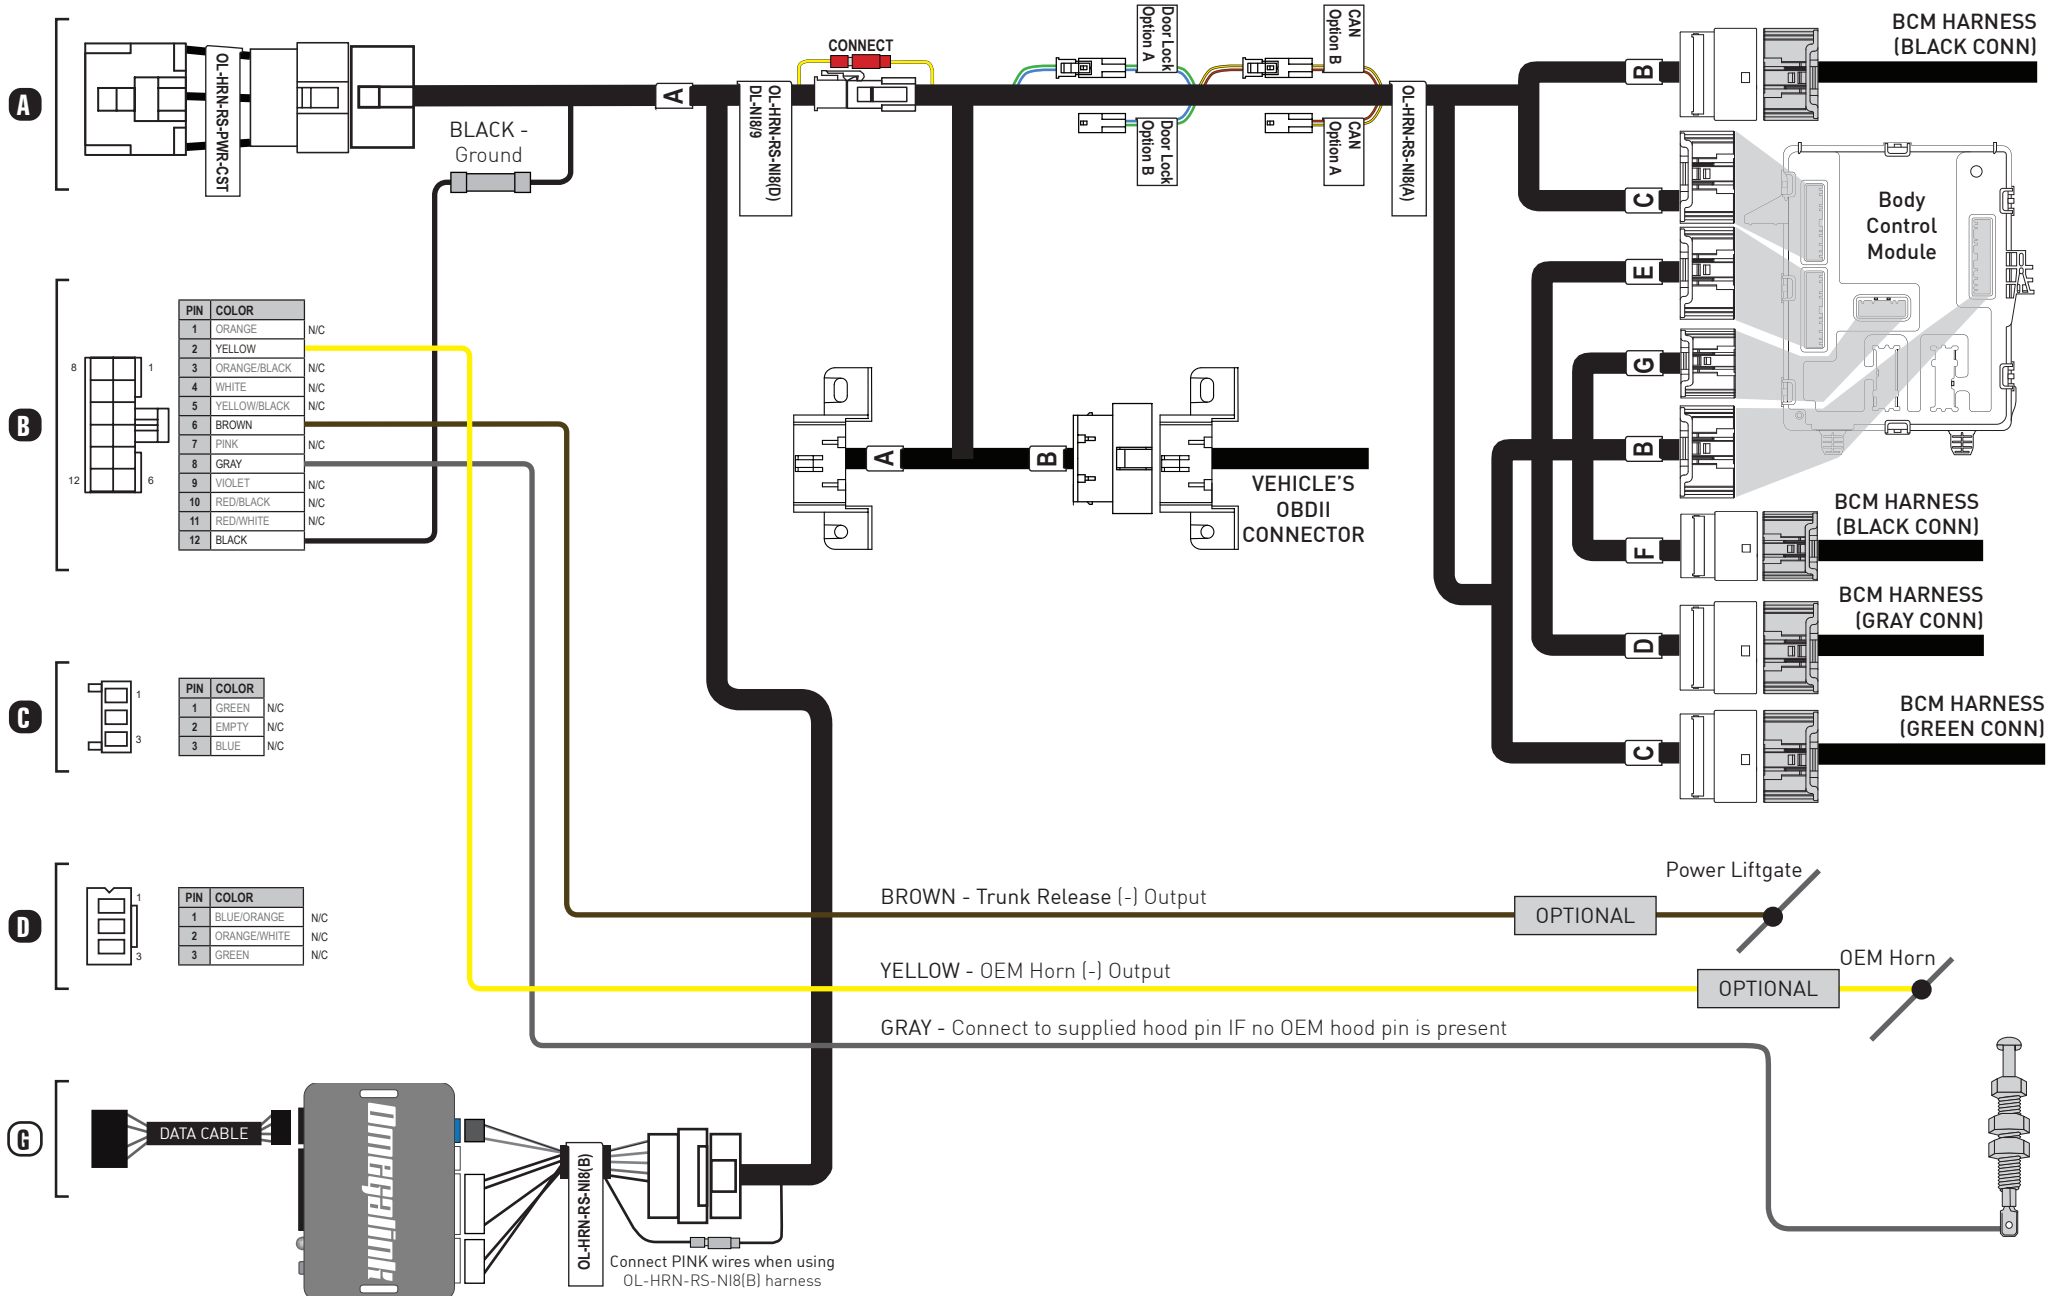

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409


Wire Location Chart Diagram #4

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Infiniti	QX50	Push-to-Start Automatic	2019 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	18	GRAY	(-)	Driver Kick Panel
				Lift Gate	WHITE	16	4	WHITE	(-)	At Liftgate Switch Lower Dash Panel

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409


RSX-G5 Diagram #4

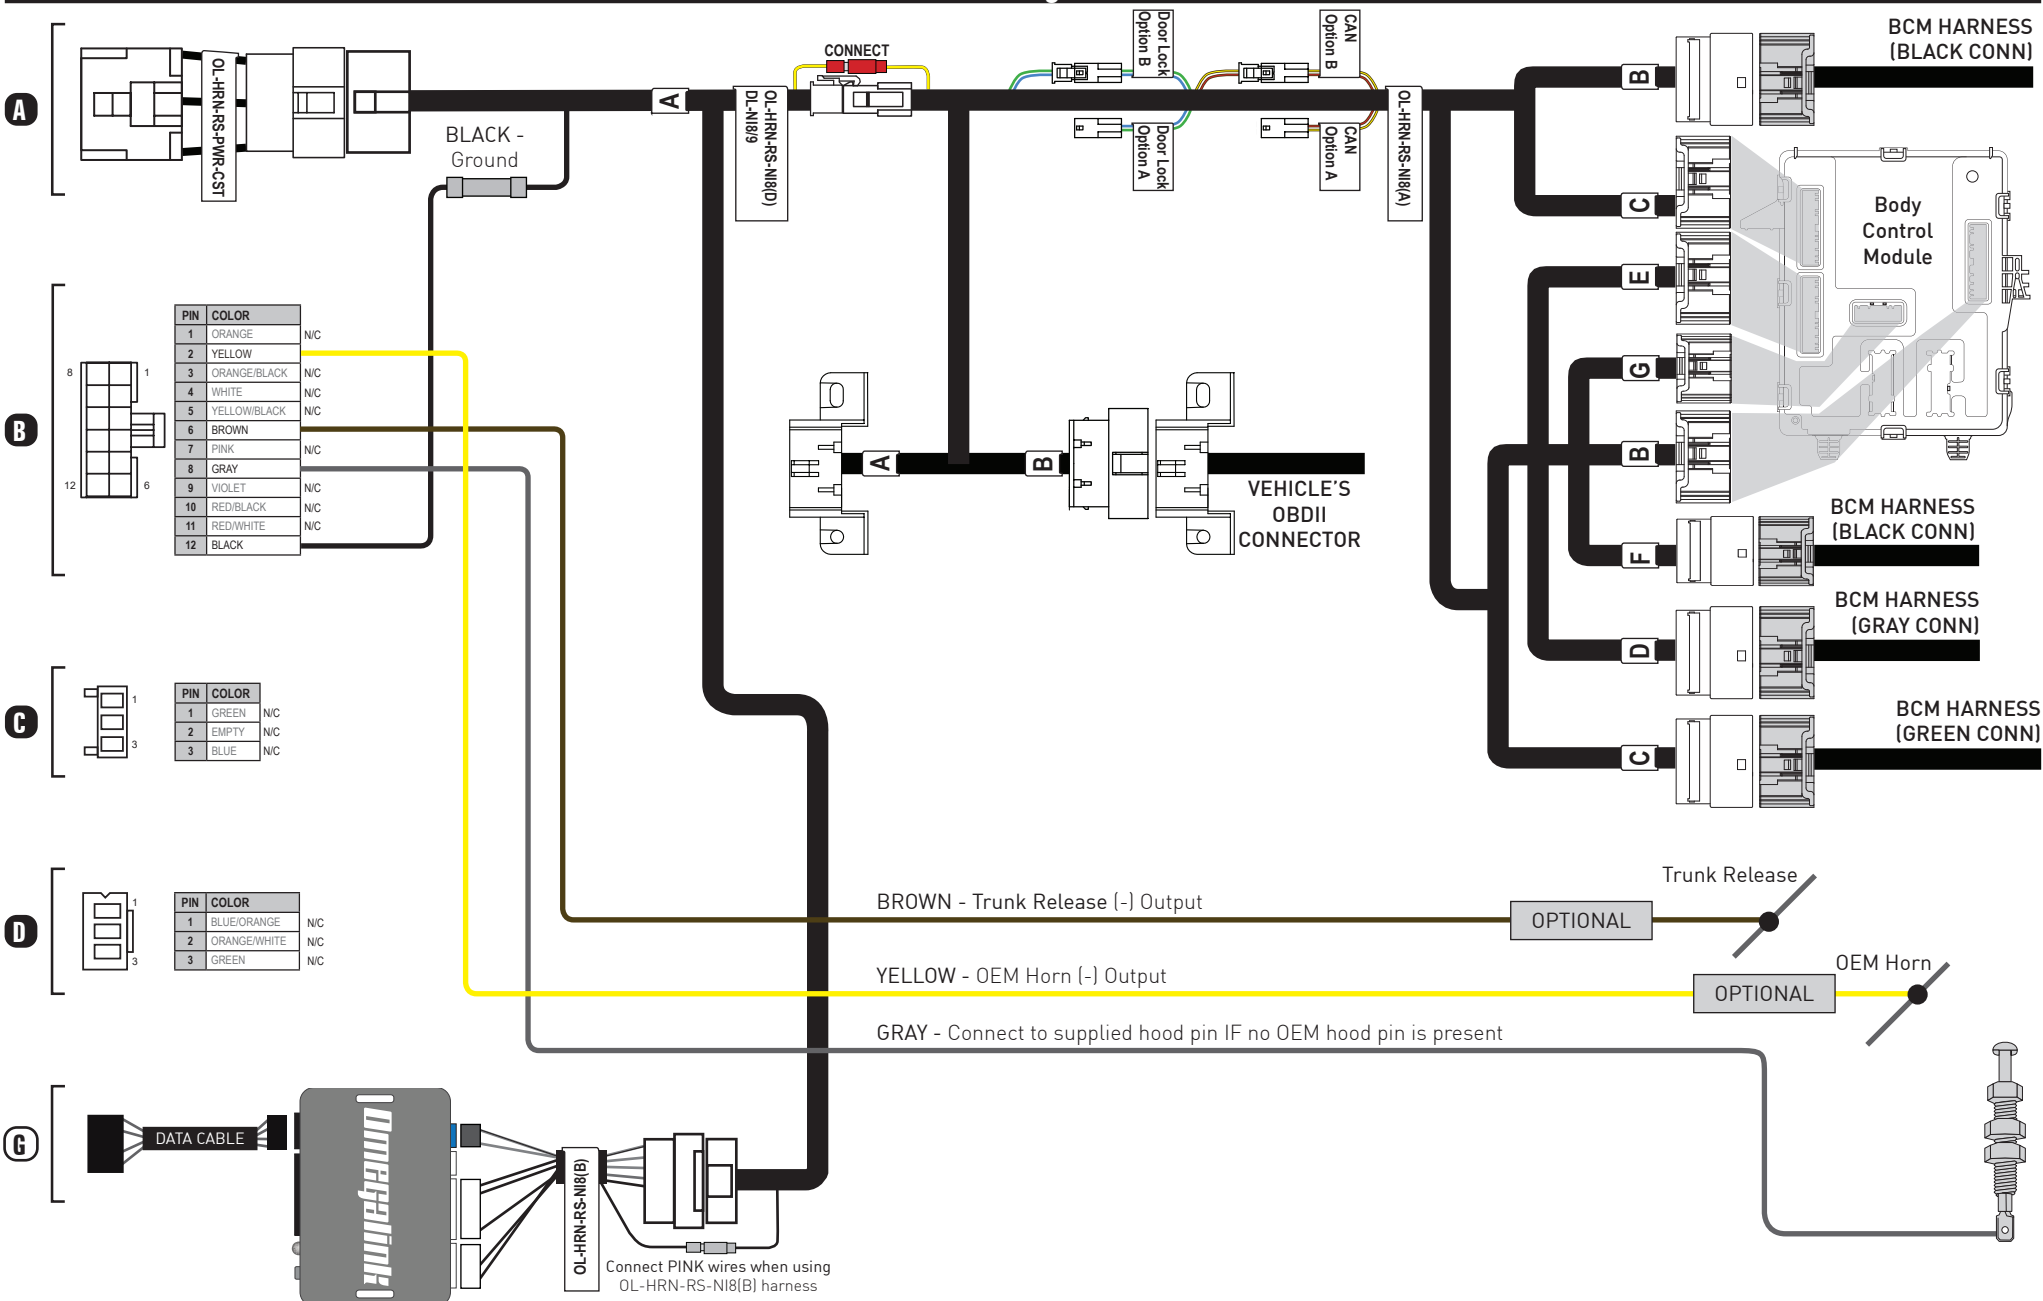


MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409

RSX-G5 Optional Accessories

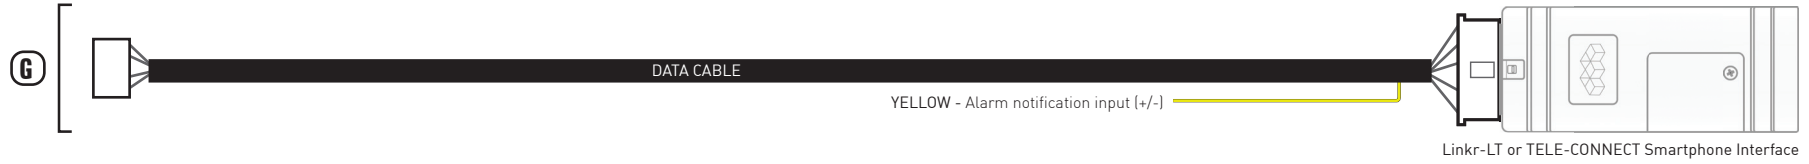

Installation Mode Selection

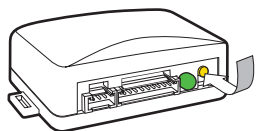

1 Press & release programming button to select installation mode.

2 Press & hold programming button until LED turns solid GREEN to register selection.



LED flash (1x) once = Data Mode (Recommended)


LED flashes (2x) twice = Hardwire Mode

Module Programming

1 OFF ACC **ON** START




Turn the ignition to the ON position.




Wait, the LED will turn solid RED, then solid GREEN for 1 second, then solid RED.

3 OFF ACC **ON** START




Turn the ignition to the OFF position.

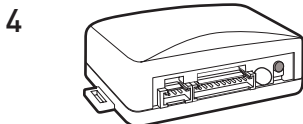


Wait, the LED will turn OFF.

5 OFF ACC **ON** START




Turn the ignition to the ON position.



If LED flashes GREEN rapidly proceed with step 7. If LED turns solid GREEN for 2 seconds proceed to step 13.

Module Programming (cont.)


7 OFF ACC **ON** START




Turn the ignition to the OFF position.



WARNING:
Disconnect power last
Disconnect module from vehicle.

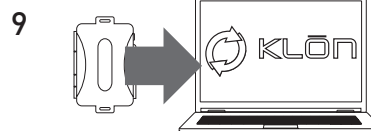


Connect module to computer and proceed with extended programming.




WARNING: Do not press module programming button.
Connect power first.
Connect all other module connectors

11 OFF ACC **ON** START




Turn the ignition to the ON position.

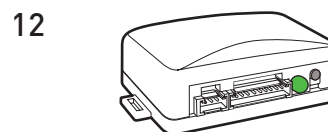

Wait, the LED will turn solid GREEN for 2 second.


13 OFF ACC **ON** START



Turn the ignition to the OFF position.

14 Programming complete. Verify all Remote Start settings and test.

RSX-G6 Layout

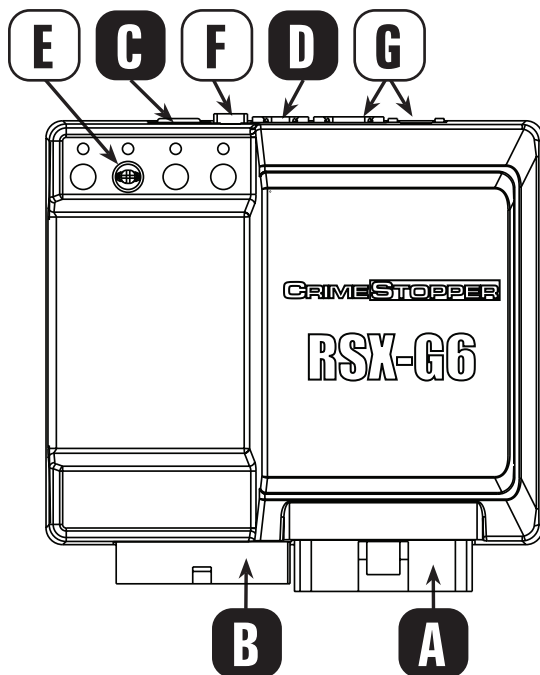

- A** WHITE 6 PIN HIGH CURRENT POWER HARNESS (P/N: H-RS6F*)
- B** WHITE 14 PIN MAIN INPUT/OUTPUT HARNESS (P/N: H-RS14F)
- C** RED 3 PIN DOOR LOCK/UNLOCK HARNESS (P/N: DLP-N3)
- D** RED 3 PIN REMOTE START HARNESS (P/N: H-RS3A)
- E** TEMPERATURE SENSOR - DO NOT COVER
(For high/low temp auto start and for automatic low temp crank extender)
- F** ANTENNA / STATUS LIGHT / VALET PORT - Supports compatible plug-in antennas or push-button status light
(P/N: AU-LED-PB2)
- G** GREEN & BLACK DATA PORTS - For Telematics / Data Sensor (Shock, Tilt, etc) / Vehicle Interface Module.
(DBI & iDatalink protocols supported on both ports - see 'Vehicle Learn' or installer feature #12)

RSX-G6 Installation Steps

INSTALLATION STEPS:

- 1) Go to www.OmegaWeblink.com or use WebLink Mobile to flash the bypass module with the firmware matching the vehicle.
NOTE: iDatalink 2-way protocol is recommended for full functionality.
NOTE: If OEM remote is being used to activate the remote start be sure "Factory keyless RS sequence" is set to "Lock + Lock + Lock" OR "Lock + Unlock + Lock"
- 2) Make all the connections shown in the diagram on the following pages.
- 3) Connect any optional hardware as needed.
- 4) Select Data Mode and program the bypass module to the vehicle (see module programming instructions).
- 5) Perform Vehicle Learn to configure the remote start to match the vehicle.
NOTE: If Vehicle Learn is not performed remote start operation could fail.
- 6) Test the system for all desired functions.

NOTE: Any features NOT supported by the interface module must be hard wired from the remote start to the vehicle. Refer to the remote start install guide and vehicle wiring info at www.wiresheet.com (only available for authorized dealers) for instructions.

MODEL: OL-HRN-RS-NI8


Wire Location Chart Diagram #1

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Nissan	Rogue	Push-to-Start 4 Cyl. Automatic	2014 - 2016	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Switch On Lower Dash
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2014 - 2016	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Switch On Lower Dash

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409

RSX-G6 Diagram #1

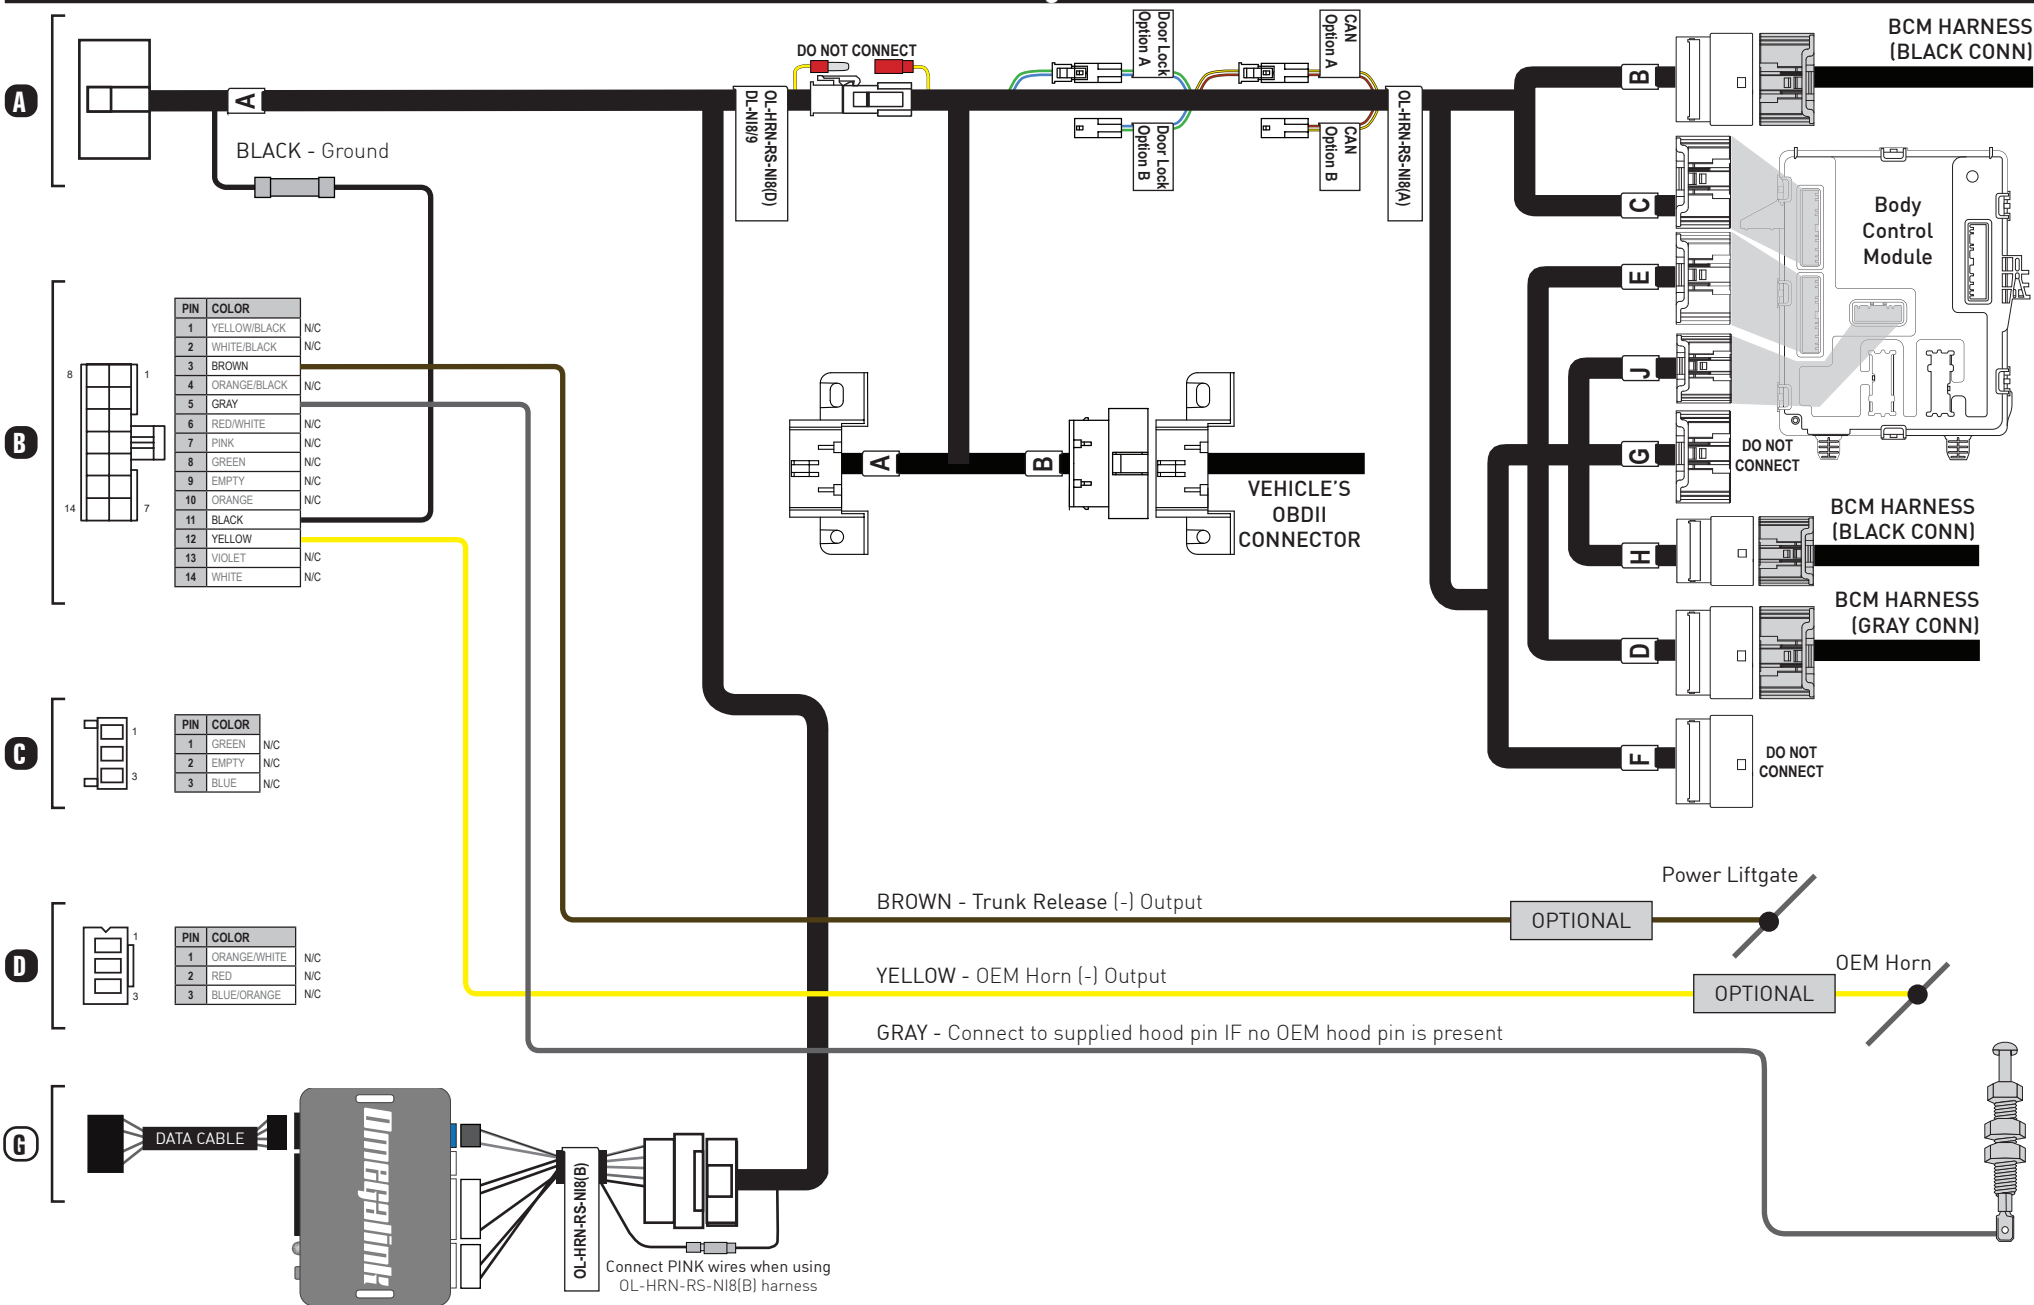


Wire Location Chart Diagram #2

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Nissan	Altima	Push-to-Start Sedan Automatic	2019 - 2021	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	BLACK	16	10	VIOLET	(-)	Horn Switch On Column
				Trunk Release	GRAY	4	2	BROWN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Qashqai	Push-to-Start 4 Cyl. Automatic	2017 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	14	14	WHITE	(-)	At Horn Switch On Column
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Qashqai	Std. Key 4 Cyl. Automatic	2017 - 2018	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	14	14	WHITE	(-)	At Horn Switch On Column
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue	Push-to-Start 4 Cyl. Automatic	2017 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2017 - 2017	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue Sport	Push-to-Start 4 Cyl. Automatic	2017 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	79	PINK	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue Sport	Std. Key 4 Cyl. Automatic	2017 - 2018	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	79	PINK	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT. GREEN	(-)	At Liftgate Switch Lower Dash Panel

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409

RSX-G6 Diagram #2

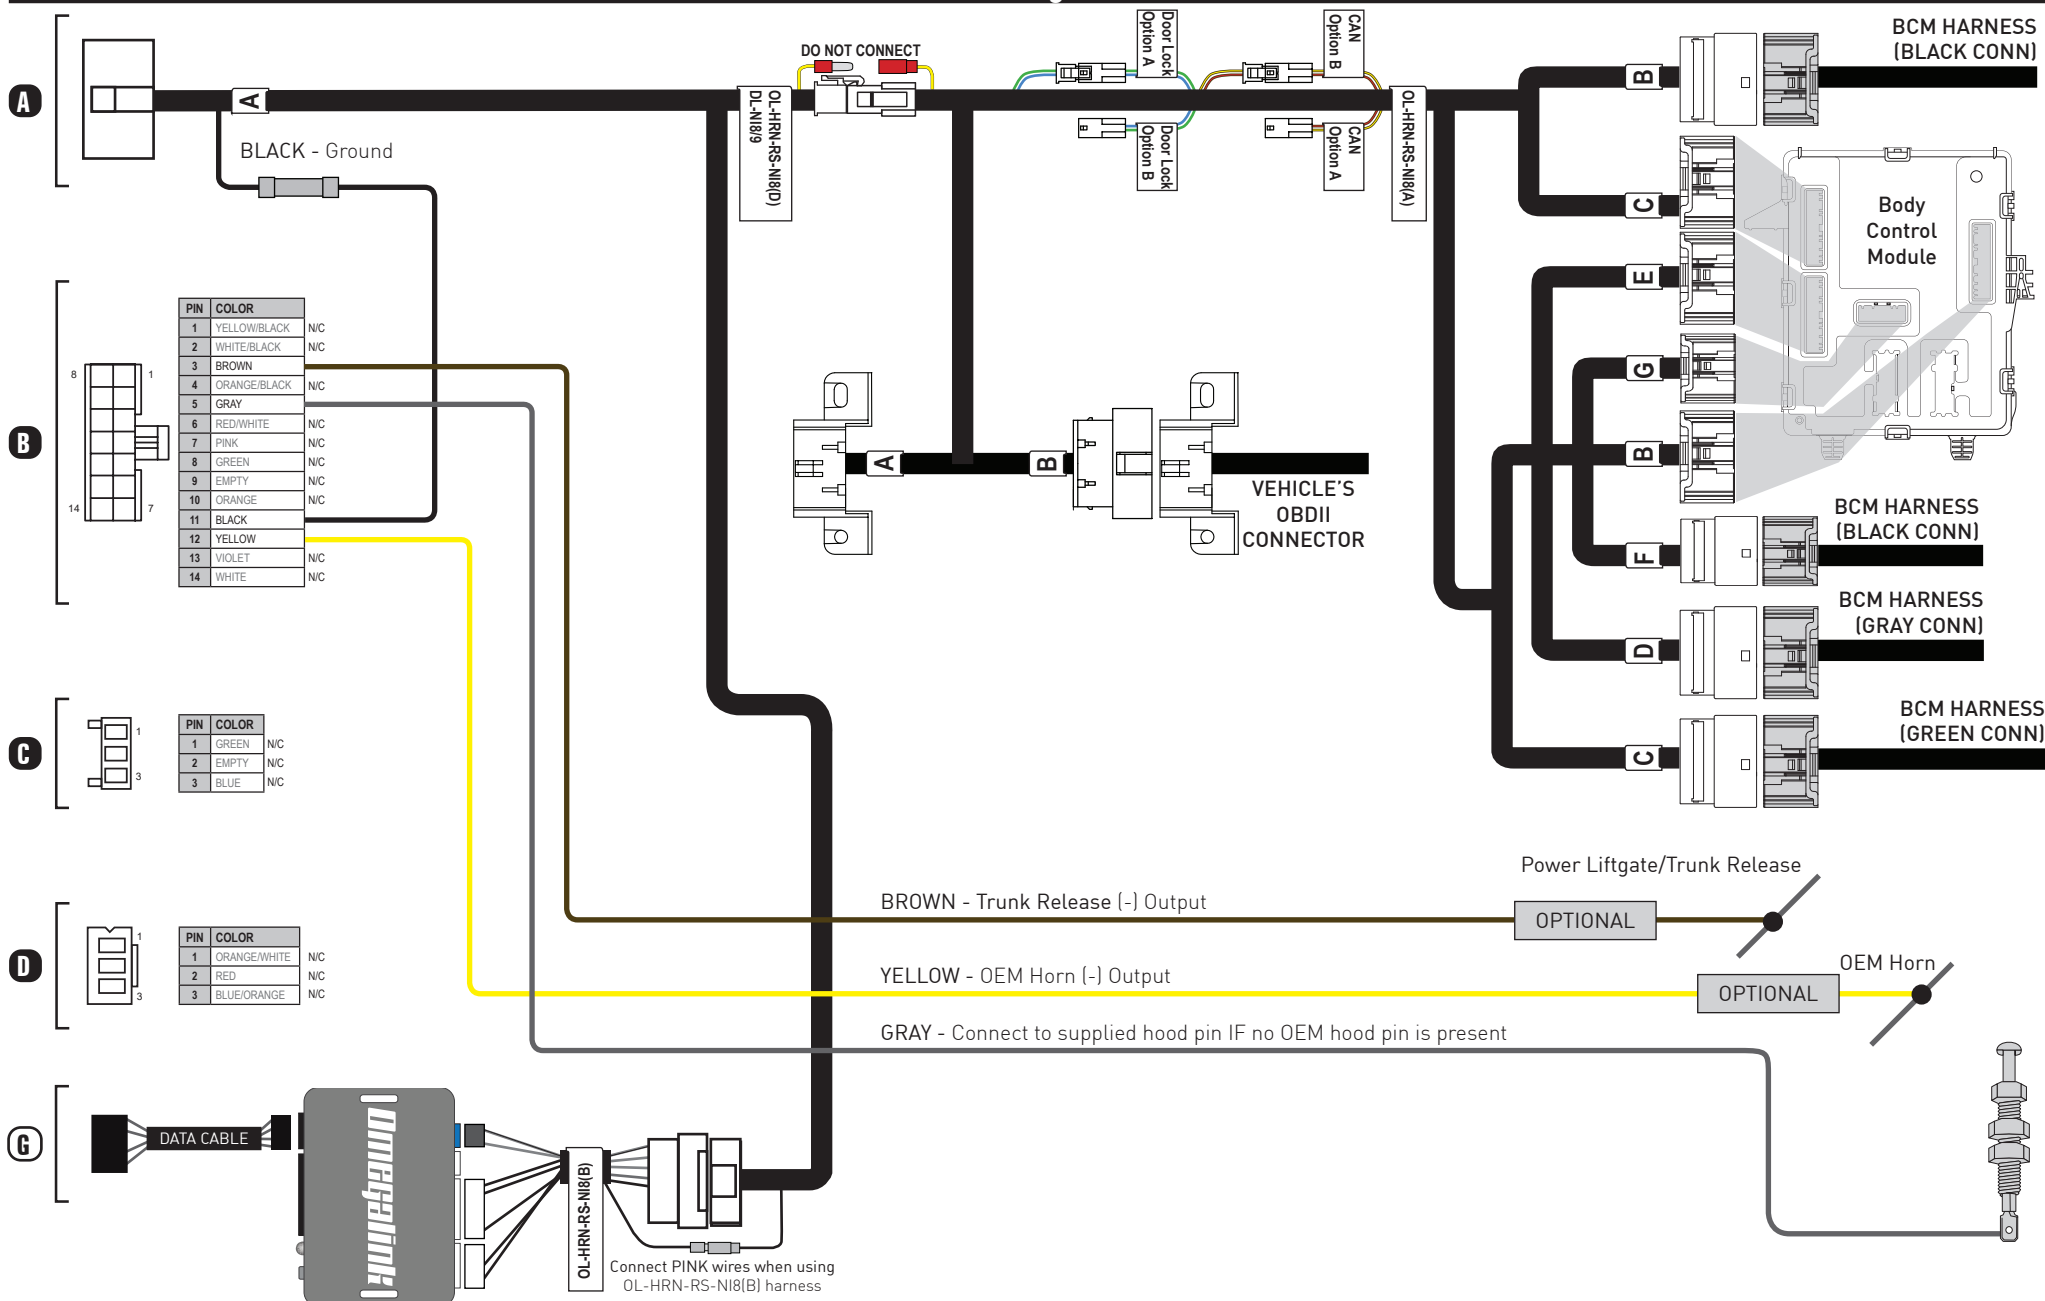

MODEL: OL-HRN-RS-NI8


GUIDE ID: CST_NI8_G6_G5_20210409

Wire Location Chart Diagram #3

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Nissan	Qashqai	Std. Key 4 Cyl. Automatic	2019 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	14	14	WHITE	(-)	At Horn Switch On Column
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue	Std. Key 4 Cyl. Automatic	2018 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	35	TAN	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel
Nissan	Rogue Sport	Std. Key 4 Cyl. Automatic	2019 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	79	PINK	(-)	Driver Kick Panel
				Lift Gate	GREEN	8	6	LT.GREEN	(-)	At Liftgate Switch Lower Dash Panel

MODEL: OL-HRN-RS-NI8

RSX-G6 Diagram #3

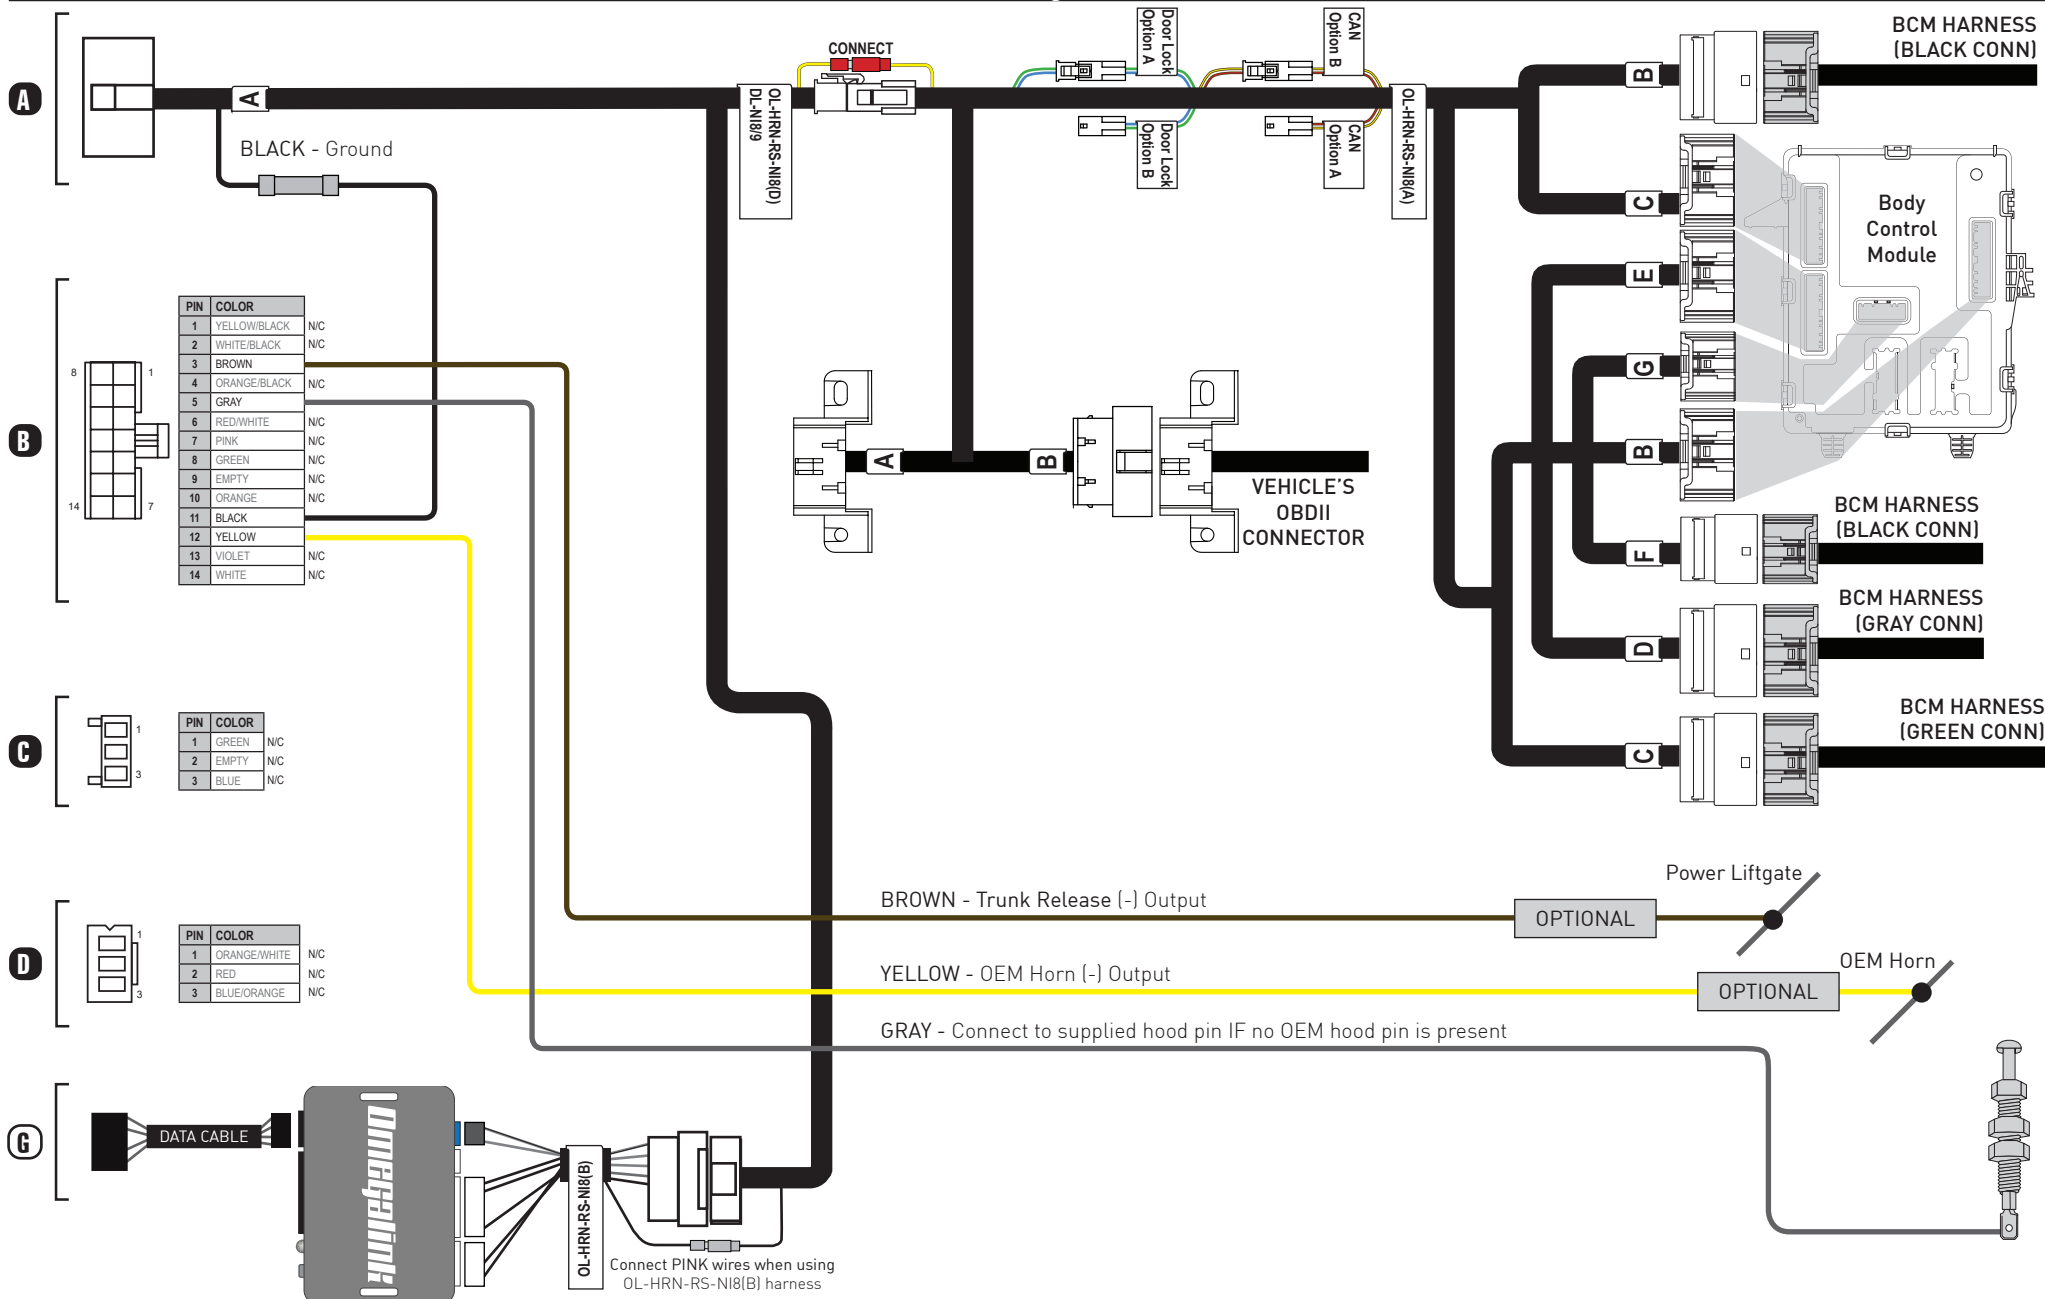

MODEL: OL-HRN-RS-NI8


Wire Location Chart Diagram #4

Make	Model	Trim	Year	Item	Connector Color	Connector Pins	Pin #	Wire Color	Polarity	Location
Infiniti	QX50	Push-to-Start Automatic	2019 - 2020	Body Control Module	-	-	-	-	-	Under Driver Side Dash
				Horn	WHITE	100	18	GRAY	(-)	Driver Kick Panel
				Lift Gate	WHITE	16	4	WHITE	(-)	At Liftgate Switch Lower Dash Panel

MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409


RSX-G6 Diagram #4

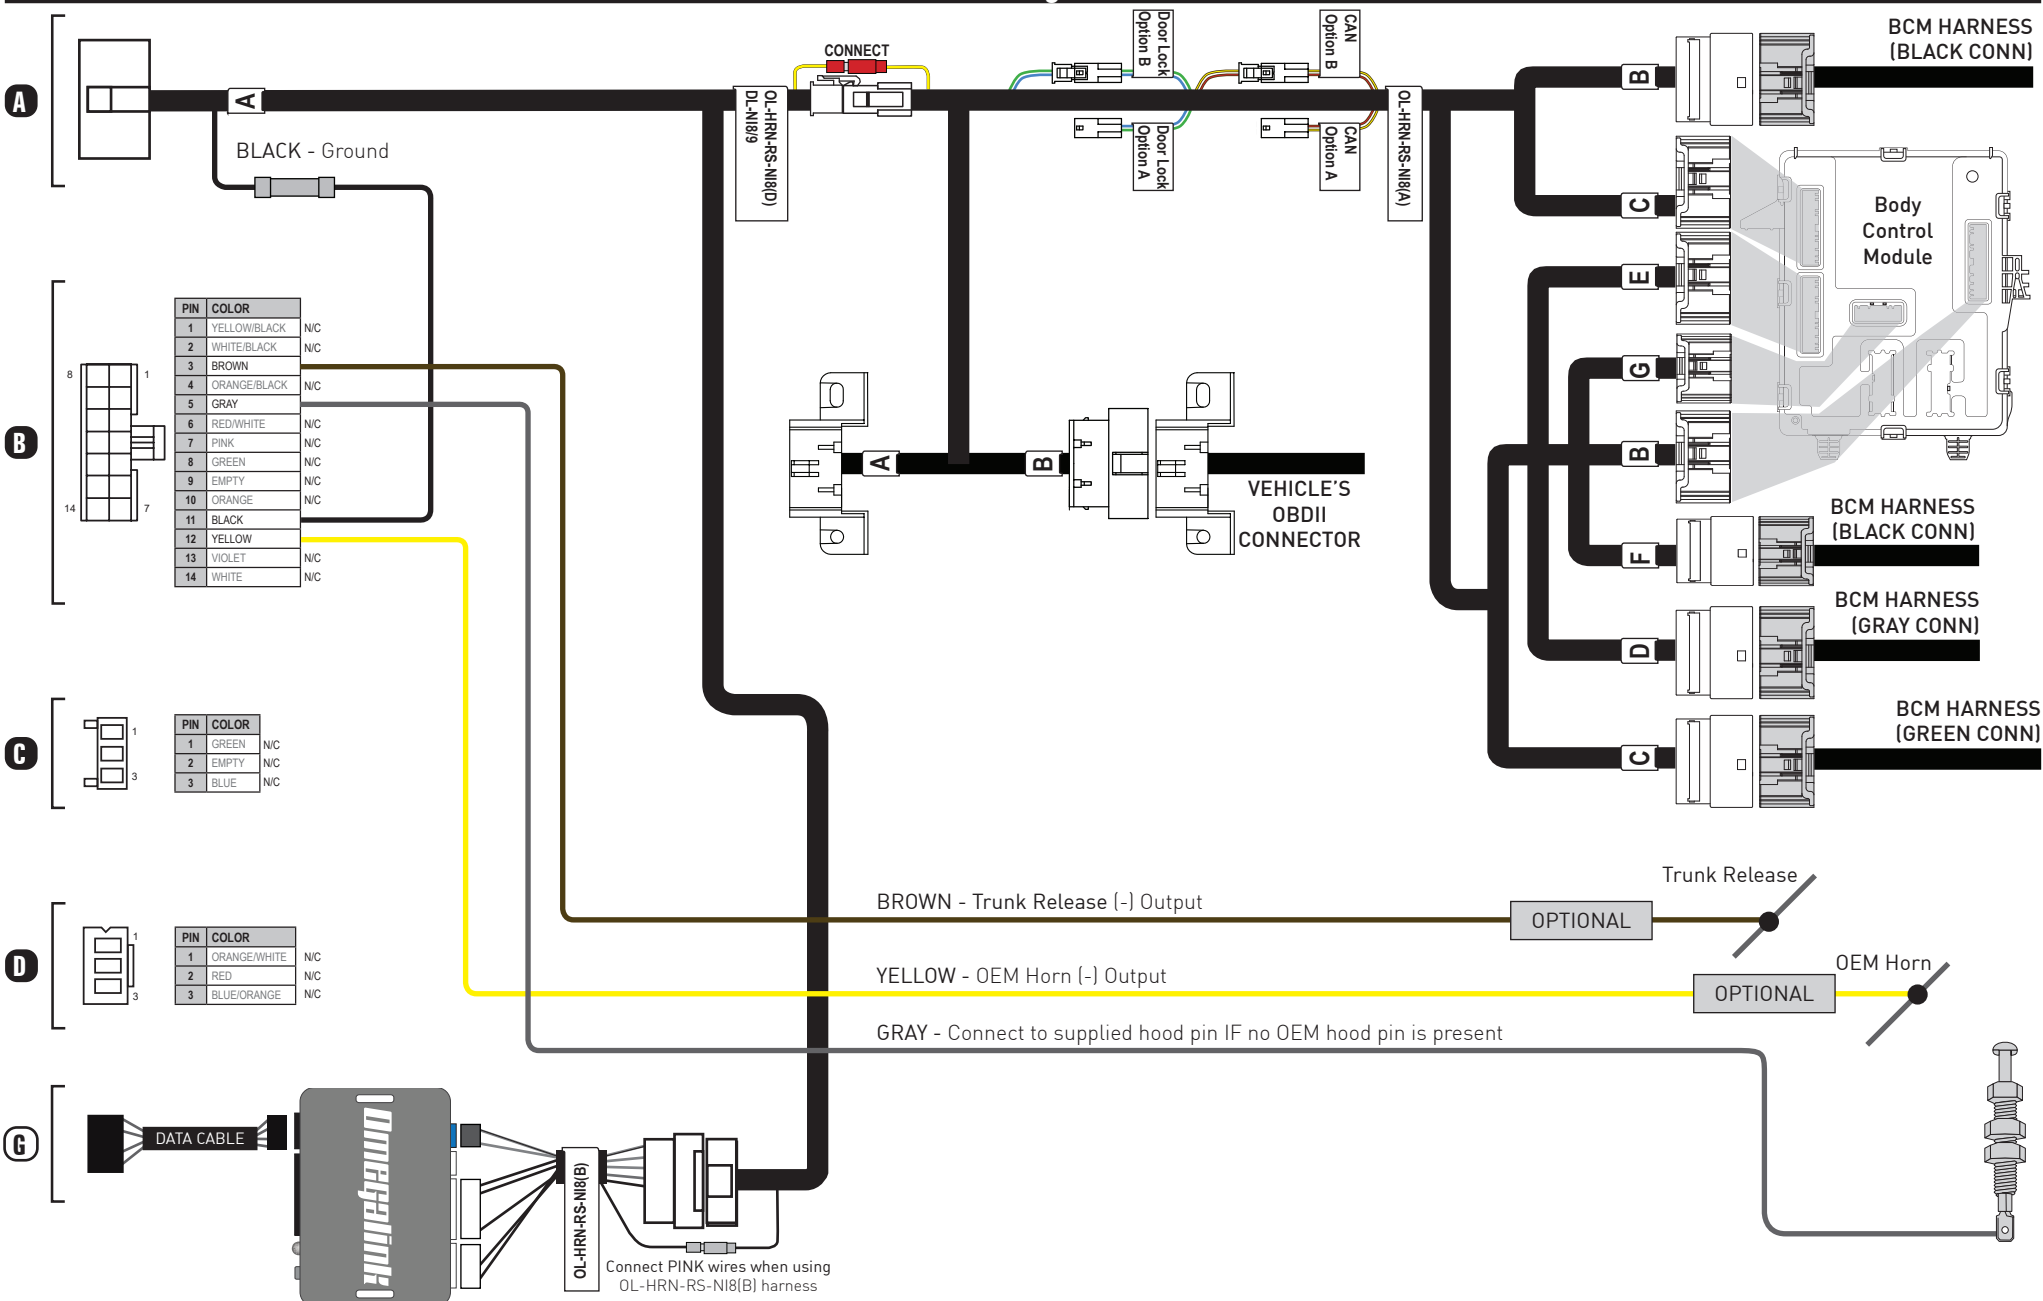


MODEL: OL-HRN-RS-NI8

GUIDE ID: CST_NI8_G6_G5_20210409

RSX-G6 Optional Accessories

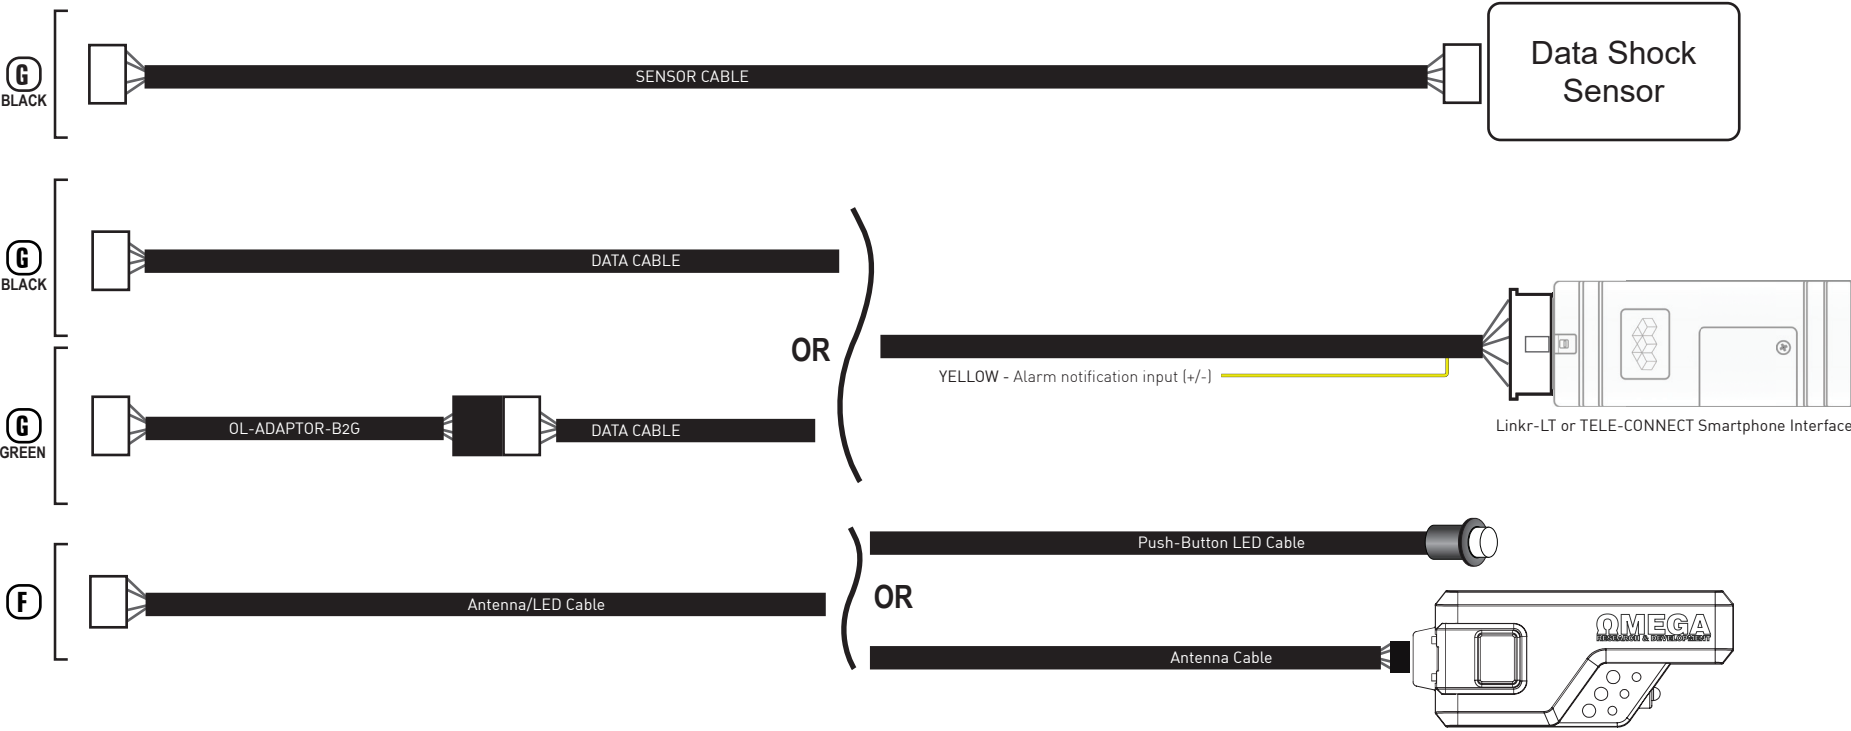

Installation Mode Selection

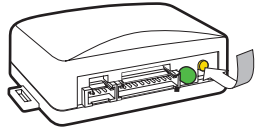


- 1 Press & release programming button to select installation mode.
- 2 Press & hold programming button until LED turns solid GREEN to register selection.




LED flash (1x) once = Data Mode (Recommended)
LED flashes (2x) twice = Hardwire Mode

Module Programming


- 1 Turn the ignition to the ON position.

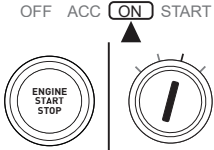


- 2 Wait, the LED will turn solid RED, then solid GREEN for 1 second, then solid RED.




- 3 Turn the ignition to the OFF position.

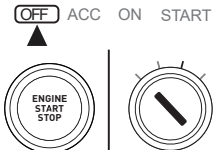


- 4 Wait, the LED will turn OFF.

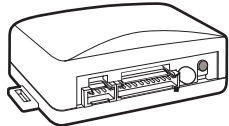

- 5 Turn the ignition to the ON position.

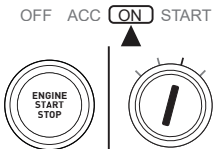


- 6 If LED flashes GREEN rapidly proceed with step 7. If LED turns solid GREEN for 2 seconds proceed to step 13.



Module Programming (cont.)


- 7 Turn the ignition to the OFF position.

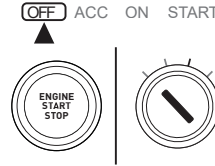


- 8 **WARNING:**
Disconnect power last
Disconnect module from vehicle.




- 9 Connect module to computer and proceed with extended programming.

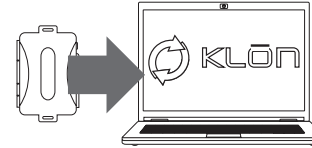


- 10 **WARNING:** Do not press module programming button.
Connect power first.
Connect all other module connectors




- 11 Turn the ignition to the ON position.

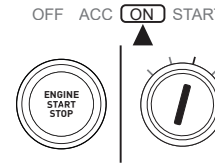

- 12 Wait, the LED will turn solid GREEN for 2 second.

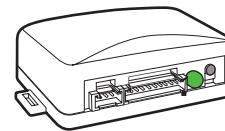

- 13 Turn the ignition to the OFF position.

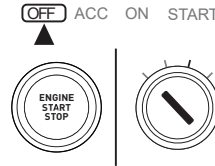


- 14 Proceed to RSX-G6 Programming/Vehicle Learn.


RSX-G6 Programming/Vehicle Learn

Before You Begin:

- Make sure all wires/harnesses are connected.
- Program the bypass module to the vehicle per the instructions on the previous pages.
- Connect any additional accessories/modules to the data ports.
- **MANUAL TRANSMISSION VEHICLES ONLY:** Change feature #6 to desired setup process. Connect the GREEN wire to the vehicles parking brake and set the parking brake.


- OFF ACC **ON** START

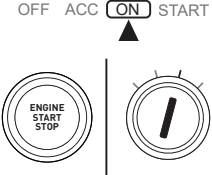

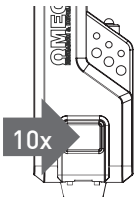
Turn ignition to ON position (do not start).
- 

Press the Valet button 8x within 10 seconds

 - The system will chirp & flash lights to indicate crank delay (Default: 1 chirp/flash = 1.5 sec)
 - **Optional:** Press valet button to change crank delay- Chirps: 1=1.5 sec, 2=15 sec, 3=20 sec, 4=30 sec
- OFF ACC ON **START**

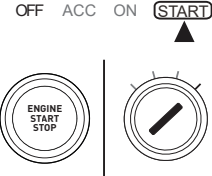

Start the engine with the key and let the engine reach normal idle.
- OFF ACC ON START

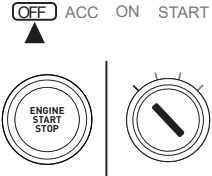

AUTOMATIC TRANSMISSIONS:
Turn the ignition key OFF.


 - The system will chirp & flash the lights equal the # of IGN/ACC/START circuits detected (Max: 4).

MANUAL TRANSMISSIONS:
Release the parking brake.

 - The system will chirp & flash the lights equal the # of IGN/ACC/START circuits detected (Max: 4).

Set the parking brake again.
Before turning the key OFF, perform the selected MT rerevation sequence (feature #6)

- 

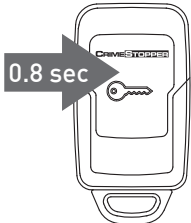PUSH-BUTTON-START VEHICLES:
Exit the vehicle and take the OEM fob/key 20 feet away to allow remote start.
- 

Activate remote start (feature #16) within 60 sec. Wait until engine is running and LED flashes slowly (10-45 seconds after engine cranks & runs).

 - The system will detect data protocols, select the best available engine running detection method, and, learn any available tach input (data or analog).
- 

TO SAVE SETTINGS/FINISH VEHICLE LEARN:
Press the BRAKE pedal (will shut down RS).

 - This disables VEHICLE LEARN (to enable again, program installer feature #2 (bank 10) to "Enabled".

TO CANCEL/START OVER:
Press the valet button once.
- Programming complete.

TroubleShooting

- See system installation guide for remote start diagnostics and troubleshooting.
- See OmegaLink module/firmware guide at www.wiresheet.com for interface module diagnostics and troubleshooting.